


DeLorean Engine Compartment Bulkhead Connections

	#	Color	Description	Notes												
Y	1	UY	To pin 85 of Ignition resistor bypass relay in engine compartment													
E	2	BO	Otterstat													
L	3	W	Top right side of ignition coil ballast resistor													
L	4	G	Otterstat													
O	5	WS	To primary (-) of ignition coil													
W	6	X														
	7	PW	Engine Compartment Light / Switch													
	8	X														
	9	X														
R	10	LGG	to Automatic tranny Kickdown Switch													
E	11	G	Power to AT Computer Governor													
D	12	GN	Reverse Light Switch to reverse lights													
	13	B	Ground for AT Computer Governor													
	14	B	Ground for Neutral / Park Safety Switch													
	15	LGW	Power for reverse lights from fuse #16													
	16	B	Ground from for AT tranny plug #170 on schematic													
	17	G	Power for AT Computer from fuse # 13													
	18	WY	Neutral / Park safety switch to start inhibit relay													
B	19	X														
L	20	O	To engine diagnostic plug from pin 17 of Lambda ECU													
U	21	P	Power from fuse #12 to engine diagnostic plug													
E	22	B	Ground for warm up regulator													
	23	B	Ground for engine diagnostic plug													
	24	UY	To starter connection for ignition resistor bypass relay in engine compartment													
	25	WO	Oil Pressure Switch													
	26	YR	To warm up regulator													
	27	N	Alternator Field	May be cut off per Service Bulletin												
W	28	K	A/C Compressor Clutch													
H	29	LGU	Water Temperature Gauge Sender	Lower resistance is higher gauge reading												
I	30	WN	Oil Pressure Gauge Sender	Lower resistance is lower gauge reading												
T	31	NY	To Alternator light on dash													
E	32	WR	To Starter motor solenoid	There are 2 WR wires here.												
	33	LG	Wide open throttle enrichment switch													
	34	LGG	Automatic transmission downshift switch													
B	35	B	Ground for both Tail light assemblies.													
L	36	GN	Reverse Lights													
A	37	P	Power to engine compartment light													
C	38	GW	Right Directional Light													
K	39	PW	From engine compartment light to switch (7)													
	40	RB	Left tail light and License light													
	41	GP	Brake Lights (6.1Amps)													
	42	RO	Right tail light and License light													
	43	GR	Left Directional Light													
W	44	X														
H	45	G	Power to pin 1 of Idle ECU?													
I	46	BS	"Idle speed regulator switch"	14.6 k ohms at 52 degrees F												
T	47	UB	To cold start valve from hot start relay													
E	48	BK	Center lead of Idle Speed Motor													
	49	BLG	Idle speed microswitch													
	50	BY	"Idle speed regulator switch" 14.6 k ohms at 52F													
	51	BG	Left hand lead of Idle Speed Motor													
	52	BR	Right hand lead of Idle Speed Motor													
	53	RO	Frequency Valve													
	54	RN	Frequency Valve													
<table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <td>B=Black</td> <td>P=Purple</td> <td>U=Blue</td> <td>N=Brown</td> </tr> <tr> <td>G=Green</td> <td>R=Red</td> <td>W=White</td> <td>O=Orange</td> </tr> <tr> <td>K=Pink</td> <td>S=Slate</td> <td>Y=Yellow</td> <td>LG=Light Green</td> </tr> </table>					B=Black	P=Purple	U=Blue	N=Brown	G=Green	R=Red	W=White	O=Orange	K=Pink	S=Slate	Y=Yellow	LG=Light Green
B=Black	P=Purple	U=Blue	N=Brown													
G=Green	R=Red	W=White	O=Orange													
K=Pink	S=Slate	Y=Yellow	LG=Light Green													
				© 2005 David Delman												

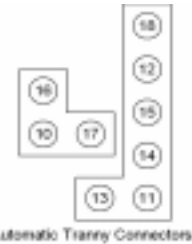

DeLorean Engine Compartment Bulkhead Connections

DeLorean Engine Compartment Bulkhead Connections

